


# HOW TO INSTALL WINDSCREENS

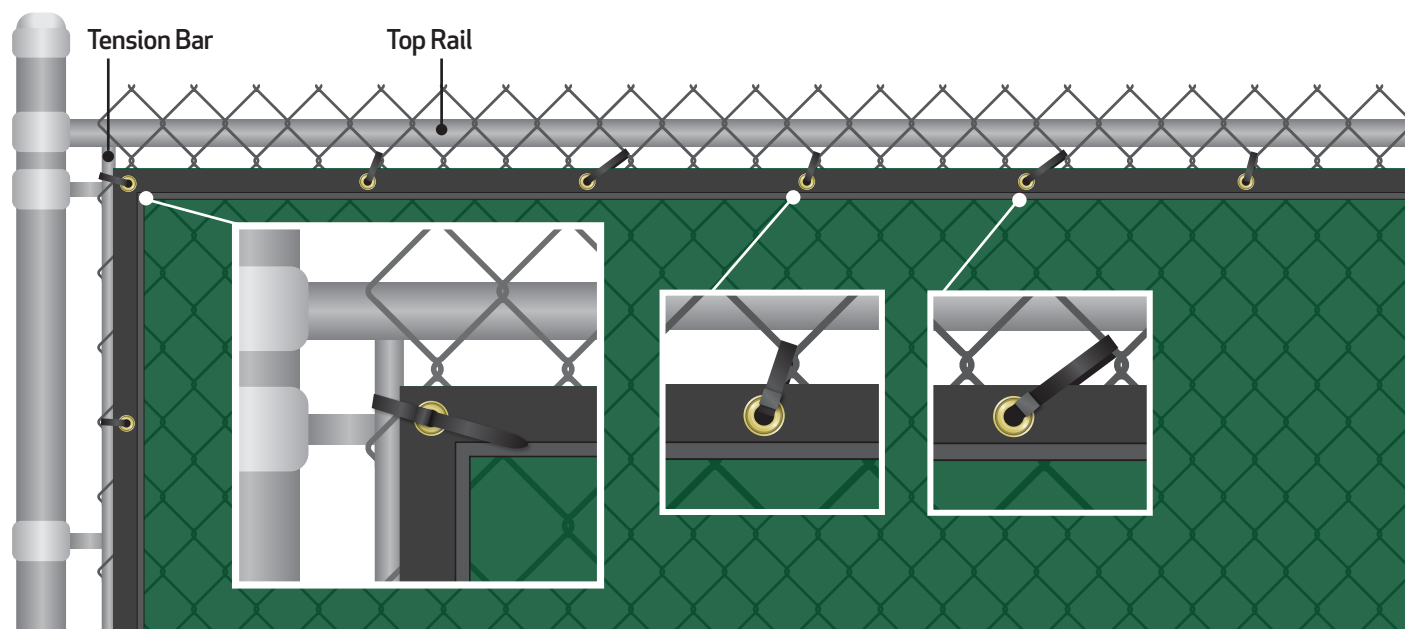

Proper installation of windscreen is the second thing in guaranteeing that enhanced, professional look. Follow these instructions to help you with the install.

## 1. Start at One End

- Lay out the full panel along the fence area to be covered.
- Attach the top corner grommet with a tie-wrap.
- Attach along the top, pulling the cover taut with each grommet for about 10 feet.
- **Important:** Attach at every grommet to distribute wind load and prevent damage.

## 2. Attach Vertically

- Go back to the starting end and attach the vertical edge from top to bottom, pulling taut as each tie is secured.

## 3. Attach Along the Bottom

- Attach the bottom for about 10 feet, pulling the windscreen taut to minimize wrinkles.

## 4. Continue Attaching

- Repeat the process: attach the top and bottom for the next 10 feet, pulling taut.
- Continue until the panel is completely attached.

## 5. Install Remaining Panels

- Use the same procedure for the remaining panels.

## 6. Secure Center Grommets (if applicable)

- On panels with center grommet strips, feed the lacing cord through the grommets and fence mesh to secure.

## INSTALL TIPS:

- If working with others, have one person attach at the top and another at the bottom, working about 10 feet apart.
- Avoid installing on windy days, as wind complicates installation.
- Never attach tie-wraps to the top rail; only attach to the chain link mesh.
- Lay the material flat between grommets without stretching.
- Regularly check and replace any broken tie-wraps.
- Angle tie-wraps slightly to the right to keep the screen flat and taut.
- Don't overtighten tie-wraps to avoid creating a wave effect.

► If you have questions in the field or need help, call the office and an experienced team member will assist you.

800-823-7356 | [AerFloSports.com](https://www.AerFloSports.com)